

VidyoRoom™ HD3

Getting Started Guide



What's Included

Your HD3 codec is shipped with the following items:


VidyoRoom HD3	
<ul style="list-style-type: none">■ Power cables for the United States, Europe, Ireland/United Kingdom, and Australia – total length 6 ft (1.828 m)■ HDMI to HDMI Cable – 6 ft (1.828m), Qty. 2	<ul style="list-style-type: none">■ Mini DisplayPort to HDMI adapter. Qty. 4■ Ethernet cable, Cat5E – 7 ft (2.13 m)■ Infrared remote control with 2 AAA batteries■ External infrared receiver with USB cable – 6 ft (1.828 m)

Please refer to the diagram on the next page to better understand how to connect peripherals to the VidyoRoom HD3.

To view a list of peripherals compatible with VidyoRoom, go to <http://www.vidyo.com/support/peripherals>.


Please refer to the *VidyoRoom Administrator Guide* to complete the setup of your VidyoRoom HD3.

Installing Your HD3 – Diagram

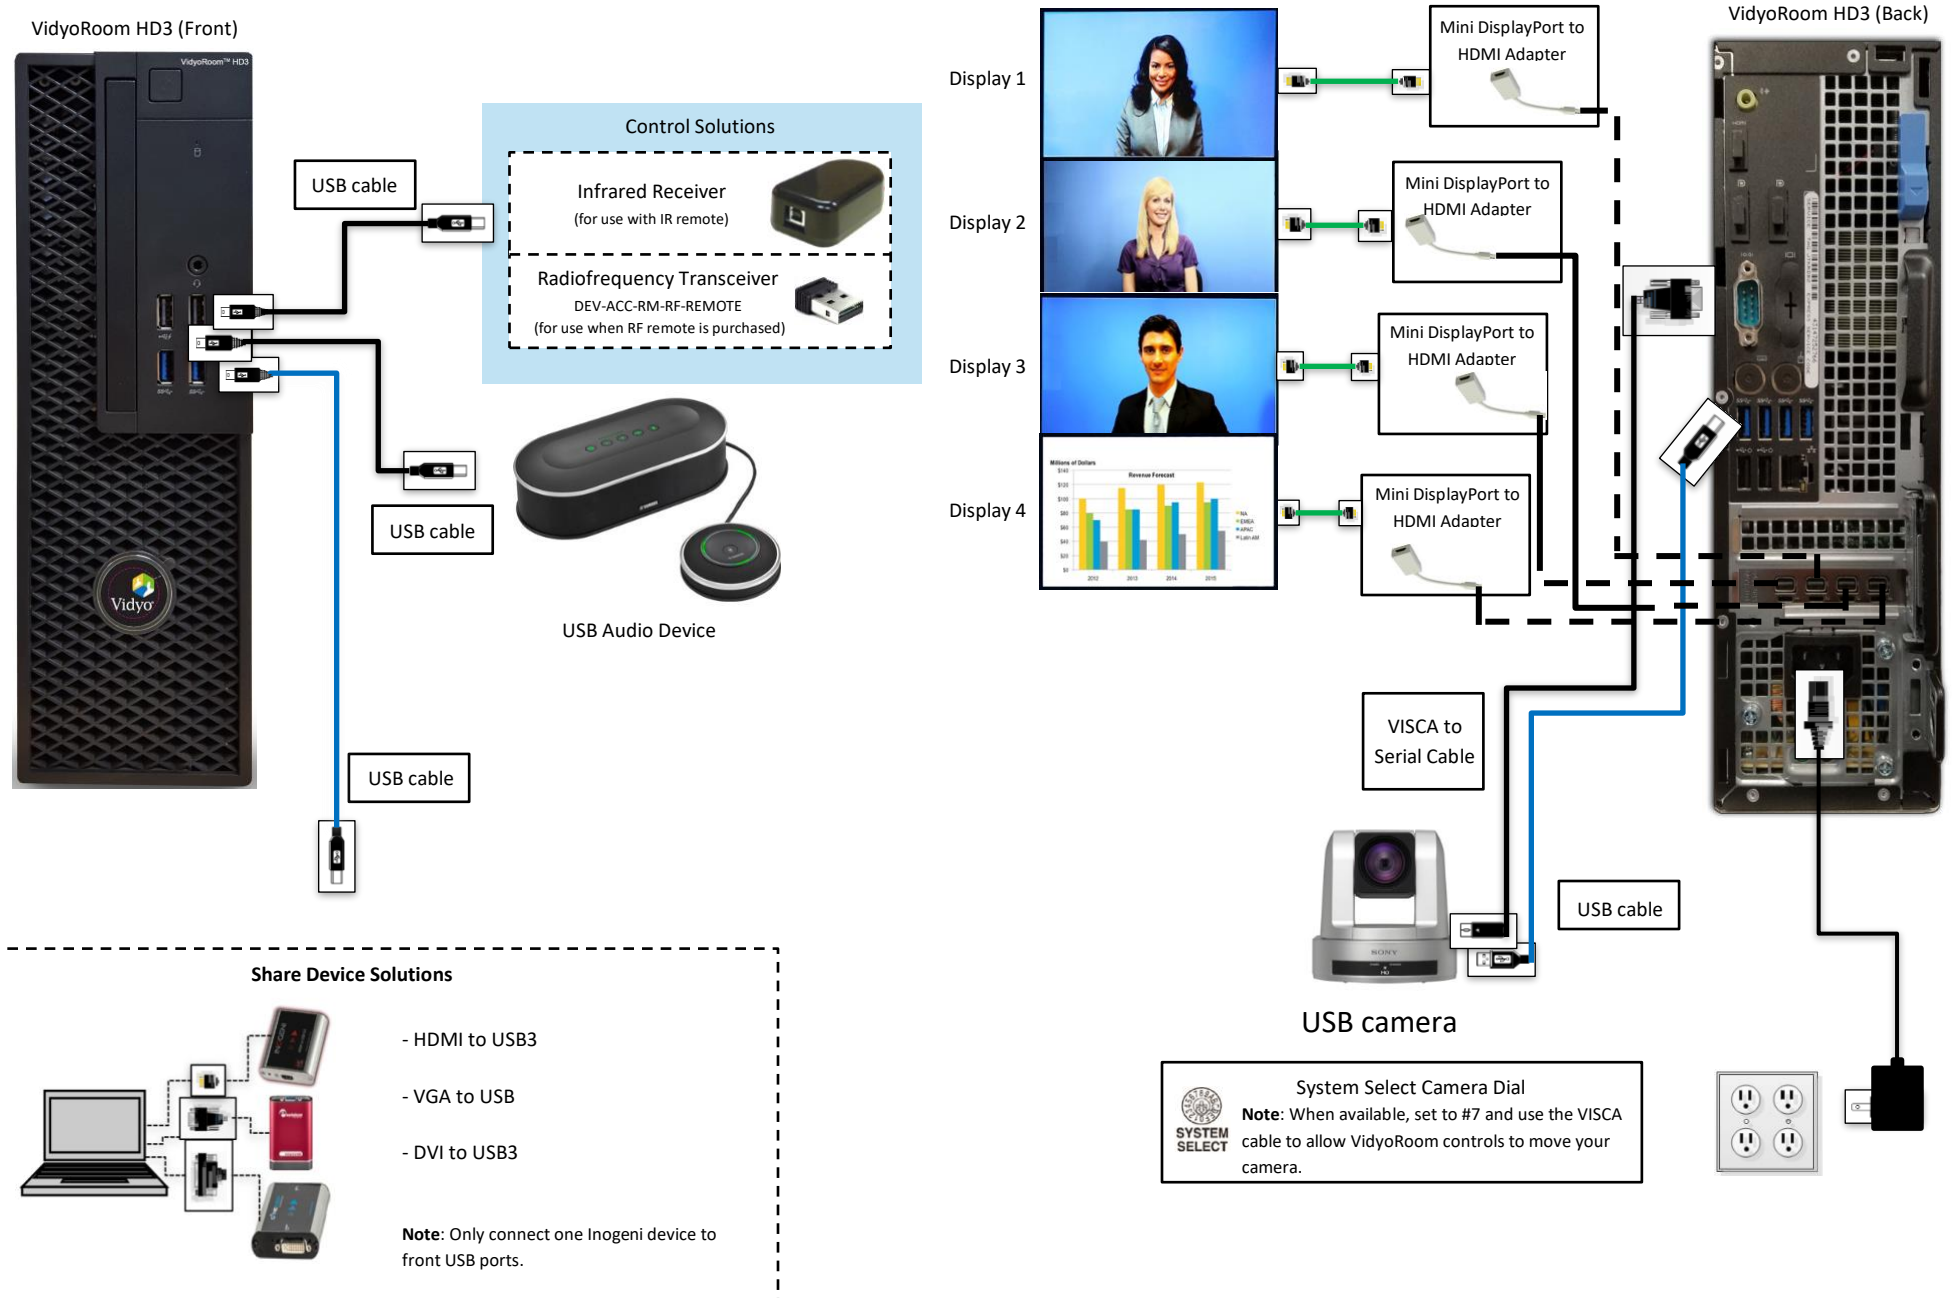

Configuring Supported Television Picture Settings

If the edges of the VidyoRoom UI are cut off, like in the screenshot below, please see the table at the bottom of this page to reconfigure the alignment.

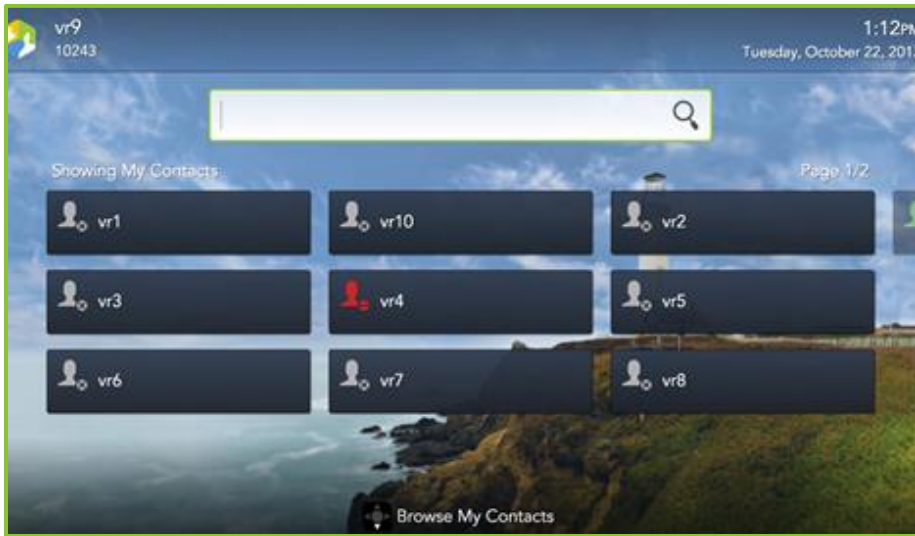

The following table describes how to configure supported television picture settings in order to properly align the user interface.

LG	Samsung	Sharp	Sony	Vizio
<ol style="list-style-type: none"> 1. Press Menu on your TV remote. 2. Select <i>Picture > Picture Options</i>. 3. Select Just Scan. 	<ol style="list-style-type: none"> 1. Press P. Size on your TV remote. 2. Select Screen Fit. 	<ol style="list-style-type: none"> 1. Press Menu on your TV remote. 2. Select <i>Picture > Advanced Settings</i>. 3. Turn Overscan Off. 	<ol style="list-style-type: none"> 1. Press Wide on your TV remote. 2. Select <i>Wide Mode > Full</i>. 	<ol style="list-style-type: none"> 1. Press Display on your TV remote. 2. Select Normal.

For more information, refer to the documentation provided with your television.